YORK®
FITNESS

# Owner's Manual

## Active 120
## 2 in 1 Cycle Cross Trainer

Item #52060

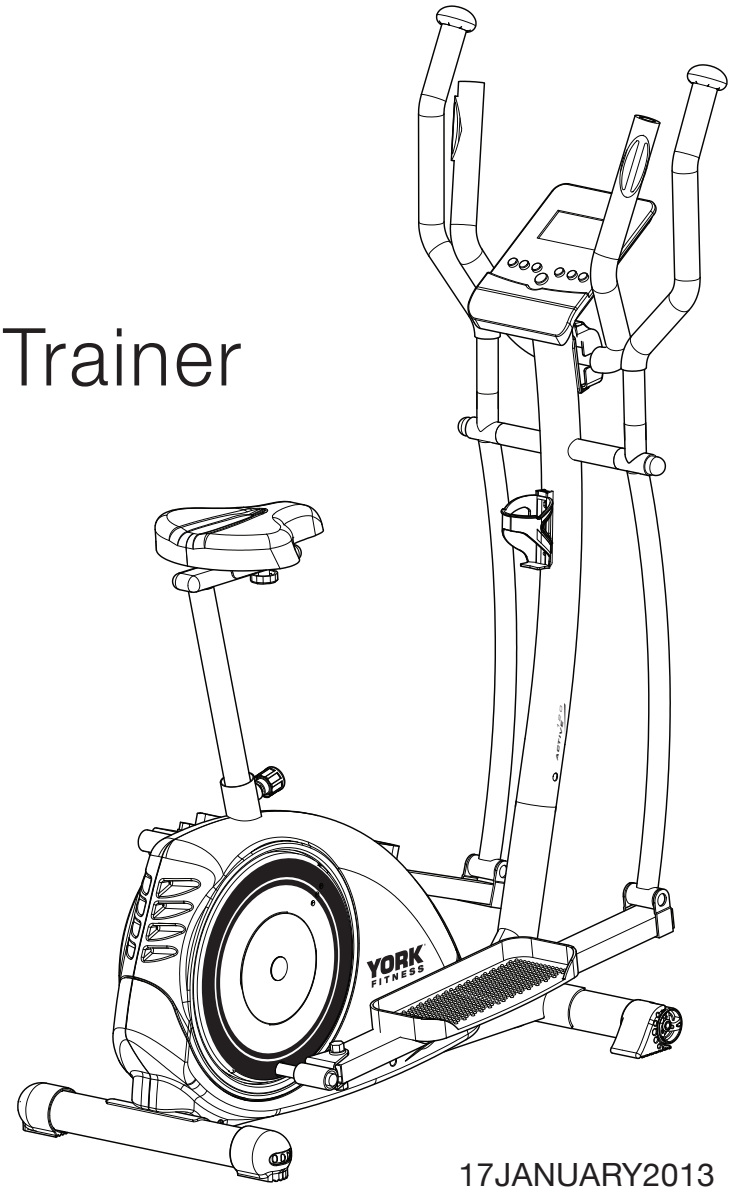


17JANUARY2013

# Table of contents

Congratulations on purchasing your exercise equipment from

YORK® FITNESS

You have chosen a high quality, safe and innovative piece of equipment as your training partner and we are certain it will keep you motivated on the way to achieving your personal fitness goals.

Please take the time to read this owner's manual as it will help you to get the most out of your new exercise equipment.

For more information visit www.yorkfitness.com

CONTENTS


| | |
|---|---|
| Safety information | 03 |
| Customer support | 04 |
| Assembly instructions | 05 |
| Operational instructions | 11 |
| Troubleshooting | 16 |
| Fitness guide | 18 |
| Exploded drawing | 20 |
| Part list | 22 |

Protect the environment by not disposing of this product or batteries with household waste. Check your local authority for recycling advice and facilities.

# Safety information

Please read this instruction manual before you begin assembly. Great care has been taken to design these instructions and following them will help you with quicker assembly and minimize the risk of injury.

It is important that you keep these instructions for future reference.

This list is not exhaustive - You are responsible for your own safety!

- Always assemble and operate the equipment on a level surface.
- Ensure the equipment is stable before use.
- Always ensure that the equipment has adequate space on each side.
- Ensure that the seat height is adjusted correctly. You should be stable and balanced while on the saddle.
- Adjust the seat height to ensure that you have a good downward pedal stroke without overstretching, don't compromise your balance.
- Try to ensure that your back is straight while exercising, especially for long periods.
- The safety level of this equipment can only be maintained if it is regularly examined for wear and tear.
- Replace defective components immediately and keep the equipment out of use until it is repaired.
- Use only the adjustment setting as described in the instructions. Always use the correct adjustment pin / fixing.
- Always check that any pins / fixings are tight and secure before use and after adjustment.
- Never leave any adjustment devices projecting from the equipment.
- Always consult your doctor before undertaking any exercise program.
- Always wear suitable clothing and footwear. (e.g. tracksuit / shorts / training shoes)
- Remove all personal jewelry before exercising.
- Ensure you warm-up well before using the equipment as this will help to prevent muscle strain.
- After eating, allow 1-2 hours before exercising as this will help to prevent muscle strain.
- Never overload the equipment. (See maximum user weight)
- Never use the equipment in any other manner other than the ways explained in these instructions and any wall-chart supplied.
- Injuries to health may result from incorrect or excessive training.
- Parents and others in charge of children should be aware of their responsibility, because the natural play instinct and the fondness of experimenting of children can lead to situations and behavior for which the training equipment is not intended.
- If children are allowed to use the equipment, their mental and physical development and above all their temperament should be taken into account. They should be controlled and instructed in the correct use of the equipment.
- The equipment is under no circumstances suitable as a children's toy.
- Children should not be allowed on or around the equipment, especially when it is not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This product is not suitable for therapeutic purposes.
- This product has an integrated speed independent braking system without a constant power mode that is governed by magnetic resistance.
- This product has been tested for use in a home environment and is warranted for In Home, personal, family or household use.
- Due to our continuous policy of product development, York Fitness reserves the right to change specifications without notice.

CAUTION! The instructions must be followed carefully in the assembly, use and maintenance of your equipment. The warranty does not cover damage due to negligence of the assembly, adjustment and maintenance instructions described herein.

**Maximum user weight: 110kg**

## Safety Standards

This equipment meets the requirements of the EU's EMC and Low Voltage directives (where applicable), EN957- 1, 9 Class HC. Therefore the equipment carries the following marks:

# Customer support

Should you require any assistance regarding this product please gather the following information and then contact us using the details below:

- Serial No. - This can be found on the sticker below, located as indicated.
- Original purchase date
- Place of purchase
- Information about the place and conditions of use
- Precise description of the issue / defect

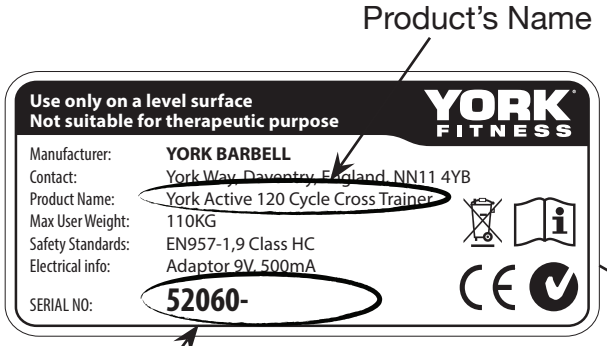


This product label is an example only, it is not the real product name and serial number of the item you have bought.

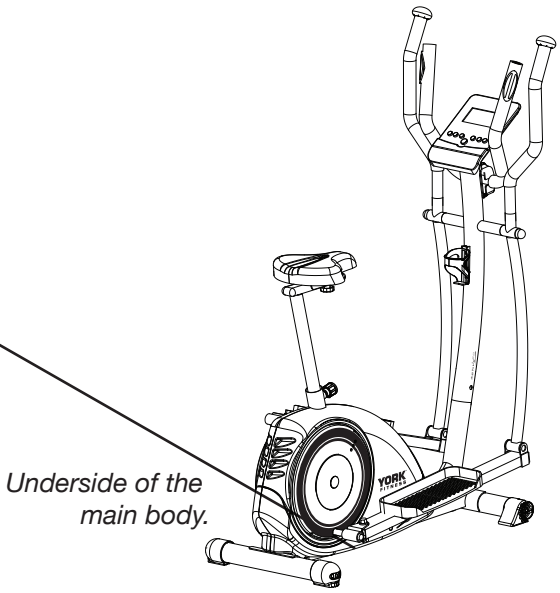

*Underside of the main body.*

IMPORTANT!! - Please retain your sales receipt, York Fitness Customer Care may request proof of purchase to validate eligibility for warranty service. Warranty cover starts from the date shown on the proof of purchase.

---

## ENGLAND

The best way to contact us is via the website:
www.yorkfitness.com

**York Barbell UK Ltd.**
York Way, Daventry,
England, NN11 4YB

Tel: 0844 225 3112

## AUSTRALIA

The best way to contact us is via the website:
www.yorkfitness.com.au

**York Fitness Australia**
1/2 Swaffham Rd, Minto,
PO Box 5130, NSW 2566

Tel: 1800 730 149

# Assembly instructions

## Care & Maintenance

- This equipment should not be placed outdoors, in a garage or an outbuilding. Keep the equipment in a dry place with as little temperature variation as possible.
- We recommend placing a mat beneath the equipment to protect both the equipment and your flooring.
- Always place the equipment in a dry environment.
- Use a warm, damp cloth to keep the product clean.
- No wet cleaning of electrical components. Unplug before any care and maintenance.
- The safety level of the equipment can be maintained only if it is regularly examined for damage and wear. This includes any ropes, pulleys, nuts, bolts, moving parts, bushes, chains, wheels, bearings & connection points etc.
- Ensure that you inspect the product regularly - at least once a week is recommended.
- Ensure that all fixings are tight before use.
- Always replace damaged / worn components with original parts from the manufacturer.

---

**Prepare your work area** - It is important you assemble the product in a clean and uncluttered space.

**Work with a friend** - We recommend you have someone assist you with the assembly as some of the components are quite heavy.

**Open the carton** - Check any warnings on the carton and make sure you have it the right way up.

**Unpack the carton** - Remove all the parts and lay them out on the floor.

## Blister Pack

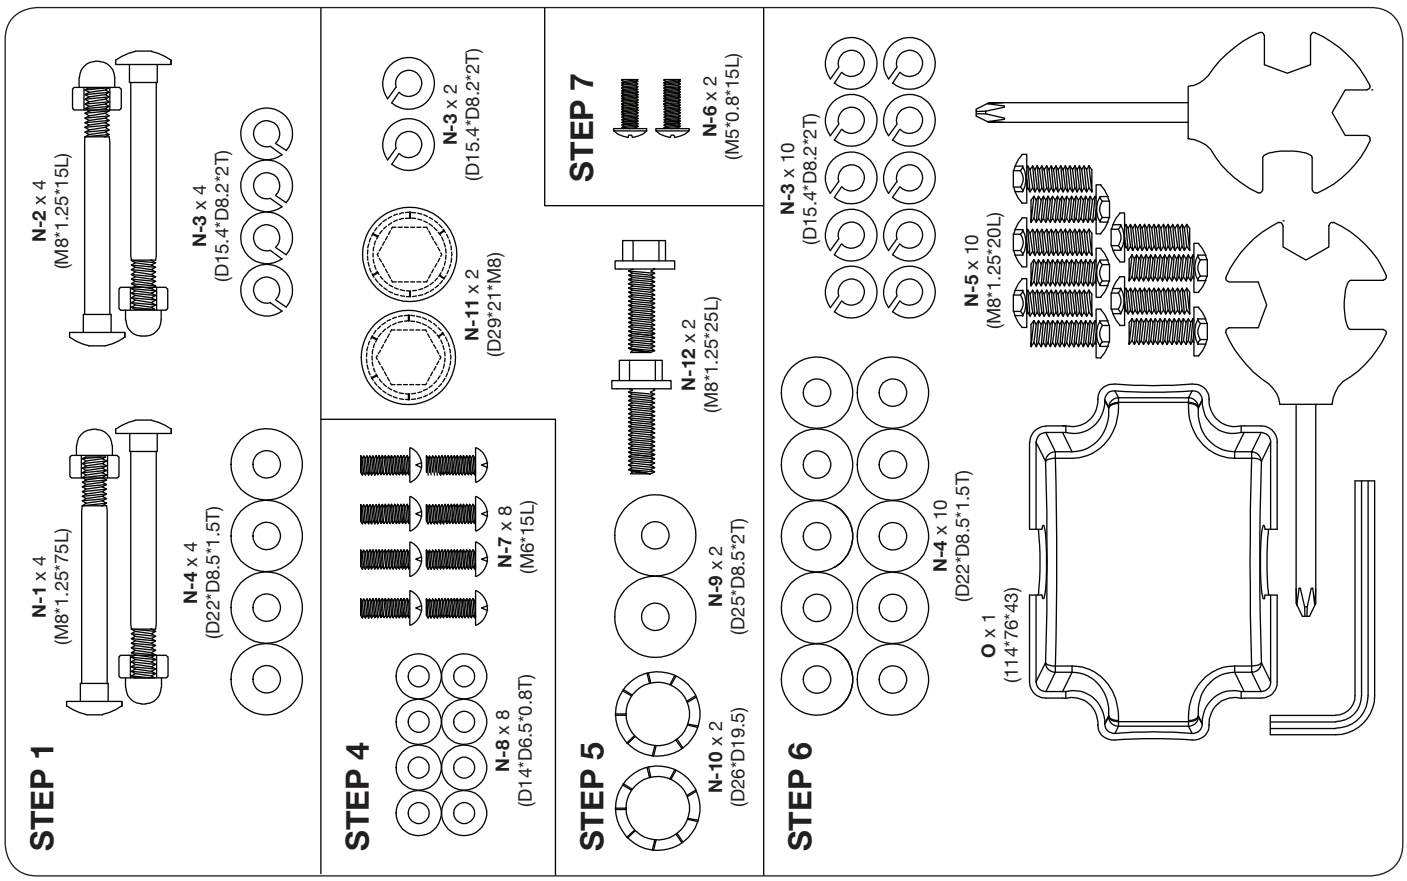

# Assembly instructions

Make sure you have the following parts:

**Z** x1

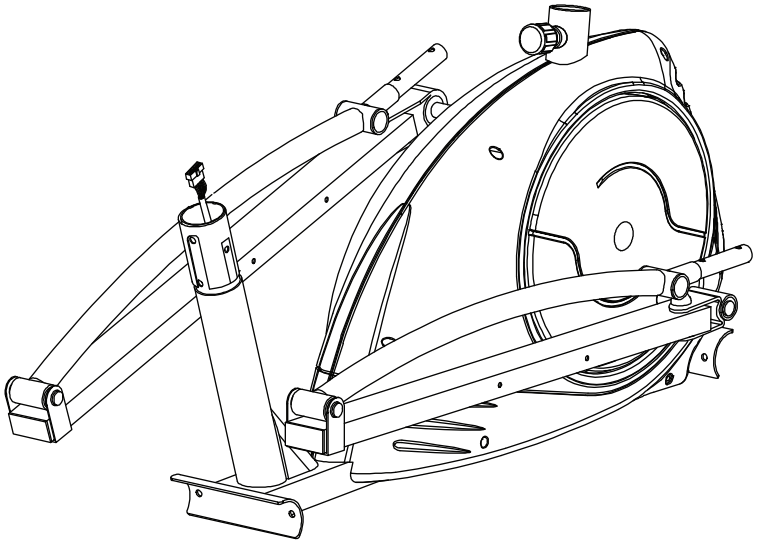

**C** x1

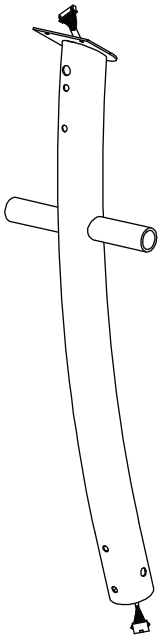

**F** x1

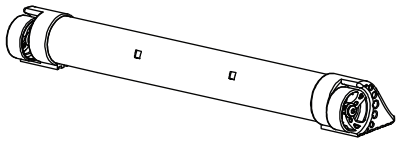

**E** x1

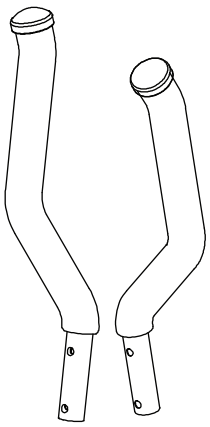

**S** x1



**G** x1



**H** x1

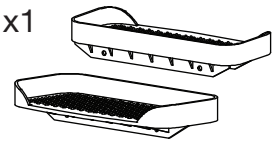

**R** x1

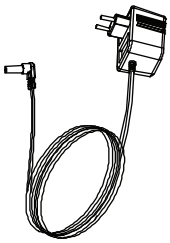

**A** x1

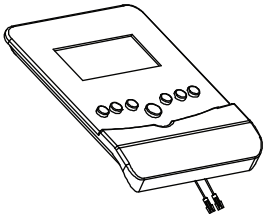

**O** x1

**B** x1

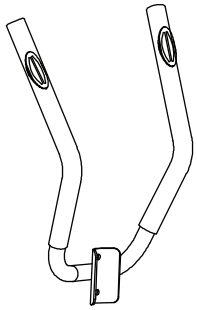

**U** x1

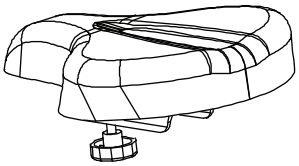

**V** x1

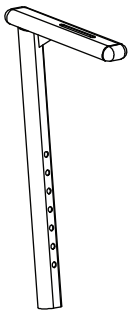

**W** x1

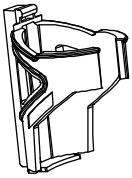

**N** x1

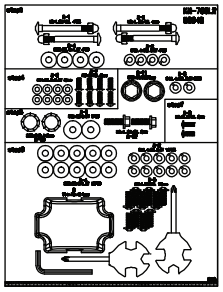

YORK FITNESS

## 1



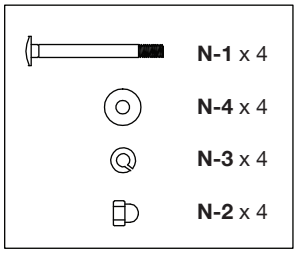


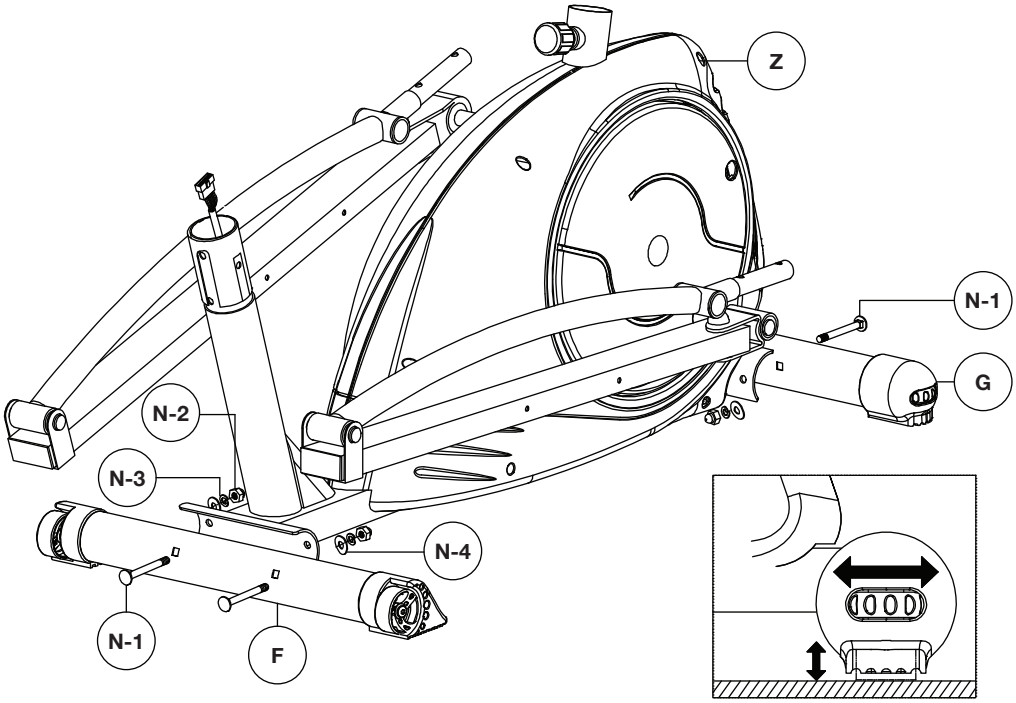




## 2

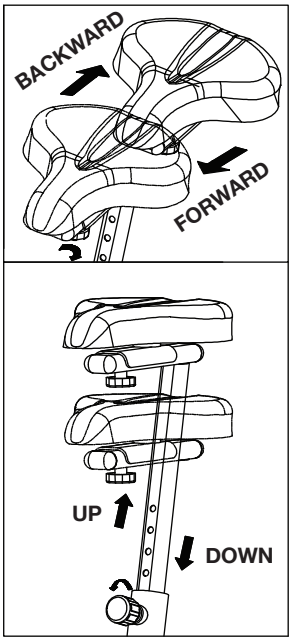


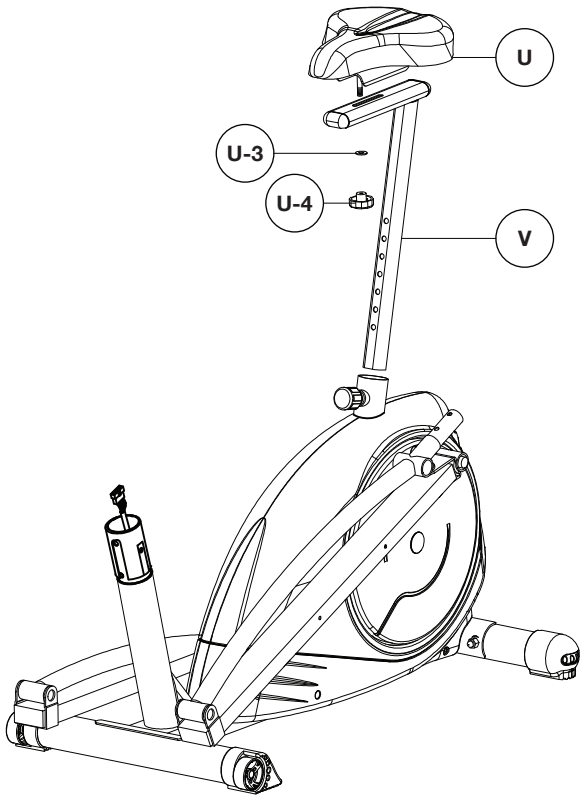

# Assembly instructions

**3**

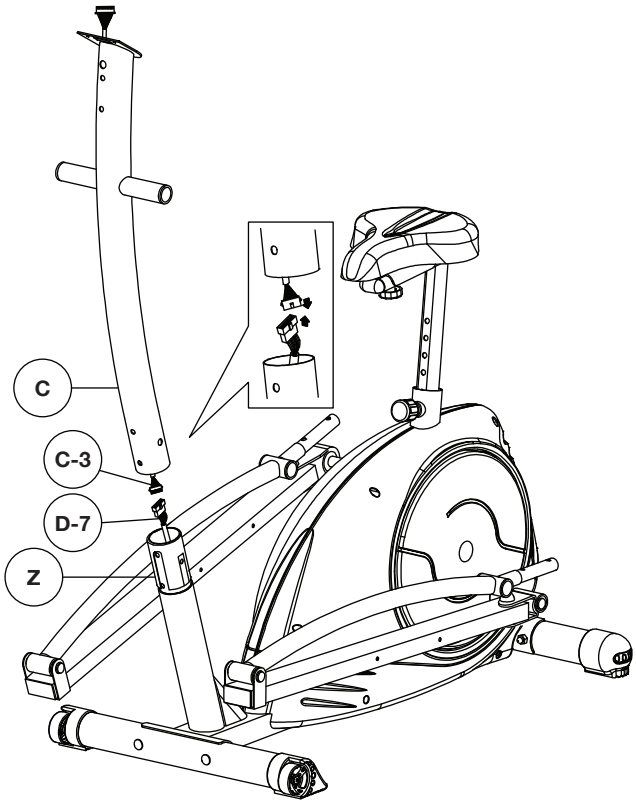


**4**



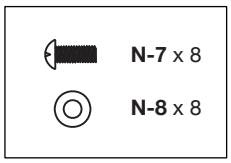


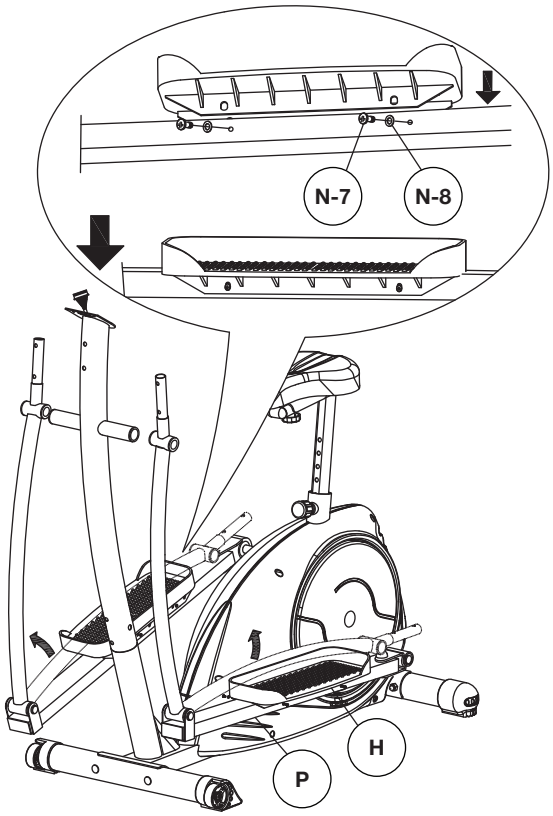

YORK FITNESS

## 5

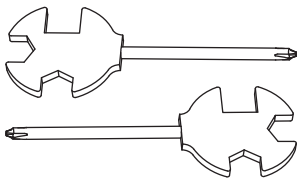

- **N-12** x 2
- **N-3** x 2
- **N-9** x 2
- **N-10** x 2
- **N-11** x 2

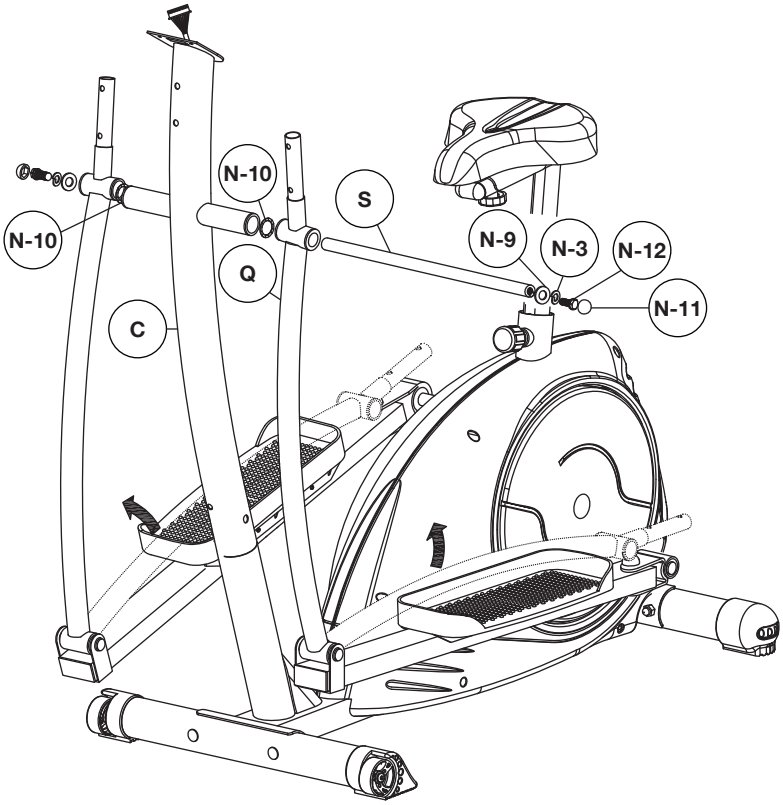


## 6

- **N-5** x 10
- **N-3** x 10
- **N-4** x 10

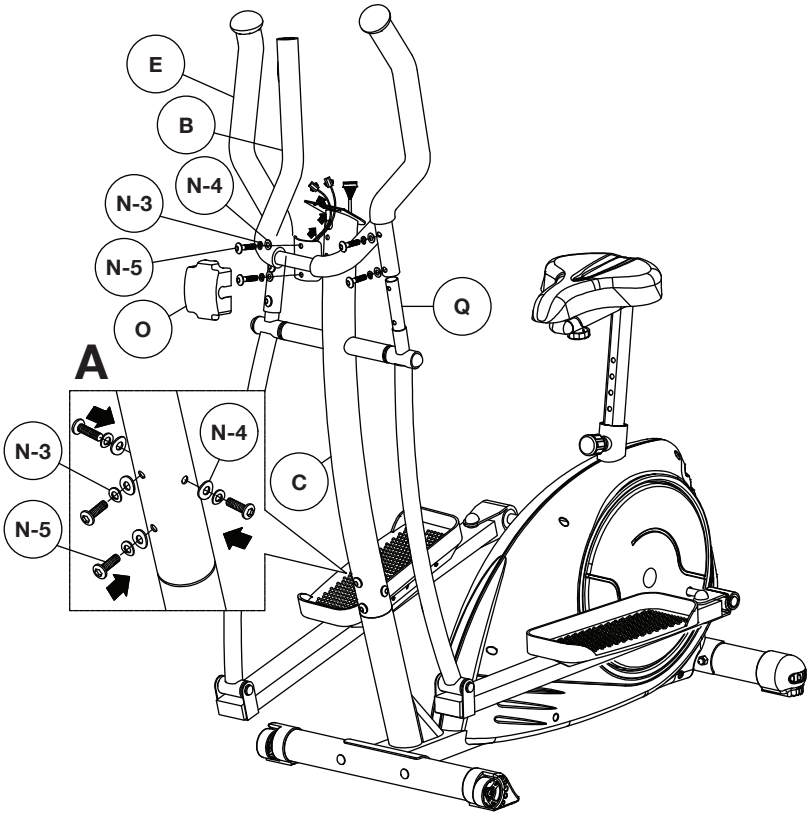

# Assembly instructions

**7**



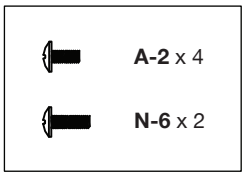


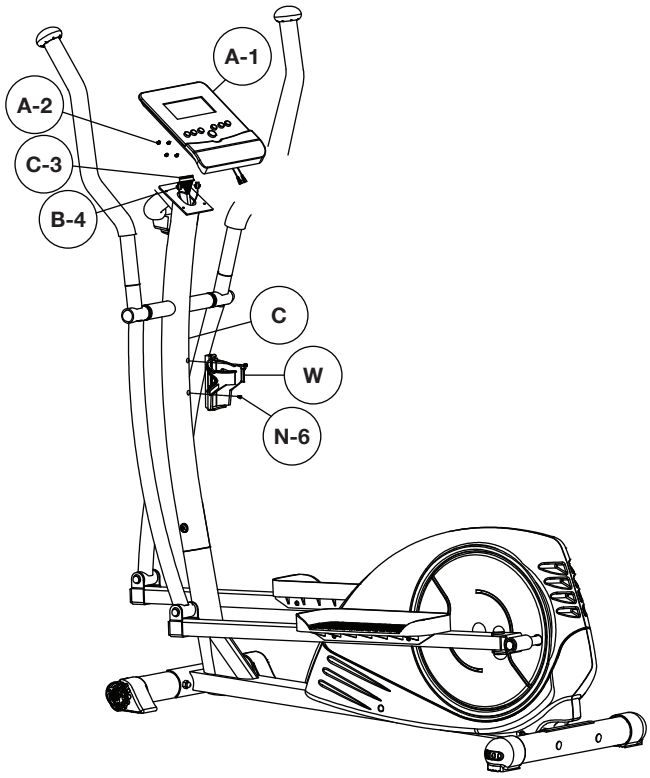


## Final Check

Your equipment is now assembled.
Please make the following final checks:

- Make sure all screws / bolts are tightened.
- Make sure the equipment is on a flat, level surface.

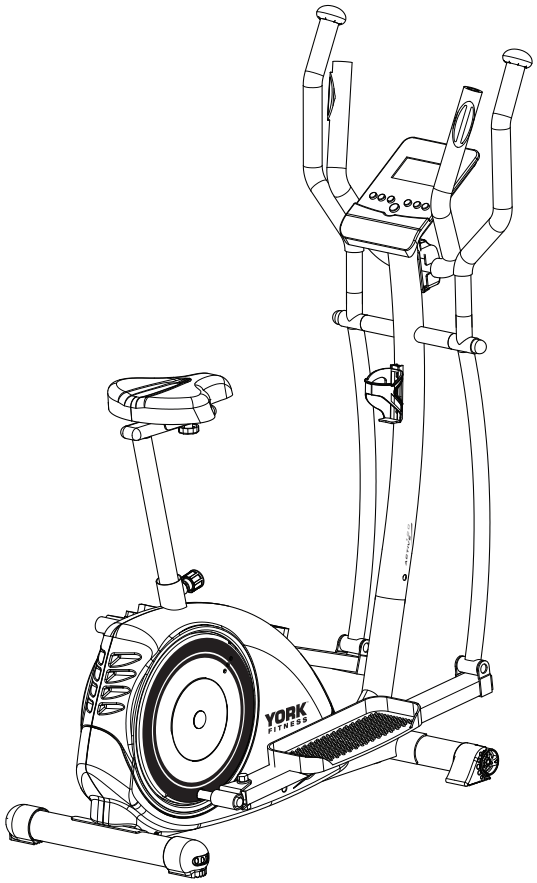

# Operational instructions

## Hand Pulse Sensors

This exercise equipment is fitted with 2 hand pulse sensors. To obtain a pulse reading you must have both your left and right hands on the sensors at the same time. Do not grip the hand sensors too tight and allow the computer a few seconds to display the reading.

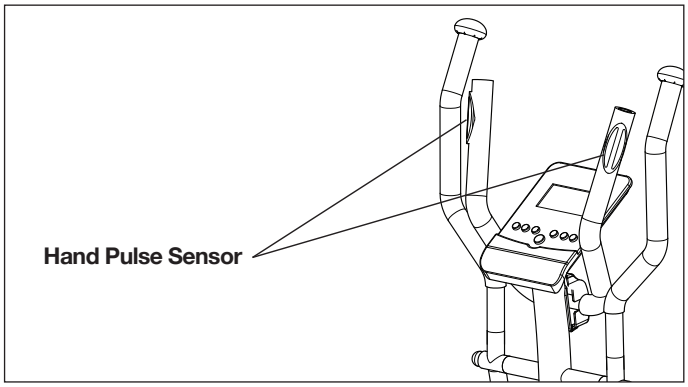


## Levelling

To help you level the equipment on uneven surface, 2 height adjusters are included on the rear stabilizers. Simply twist these around to adjust the height of the equipment.

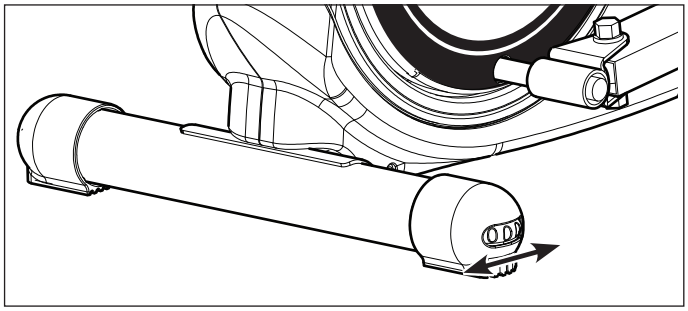

## Adjust The Seat

Simply adjust the knob under the seat to move forward or backward.

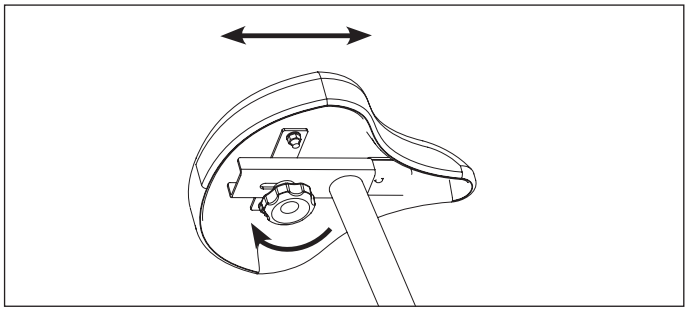

## Adjust The Seat Height

Note: Do not pull the seat out too far - the maximum is indicated with a piece of tape on the seat post.

1. Unscrew the hand wheel.
2. Adjust the seat up or down to your required height - to line it up correctly, make sure the number and line is visible at the top of the seat post mounting tube.
3. Re-screw the hand wheel - make sure it is screwed tightly.
4. The basic rule for getting the seat height right is that as the pedal reaches its lowest point, the leg is almost straight.

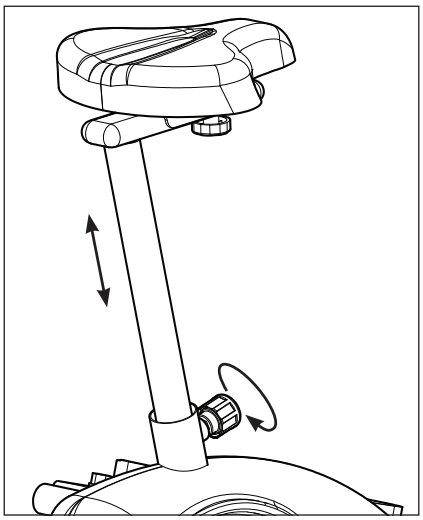

# Operational instructions

## Console

This exercise equipment features a speed independent braking (resistance) system. The resistance is controlled by a magnet, which is moved closer or further away from the flywheel - the closer the magnet is to the flywheel the higher the resistance.

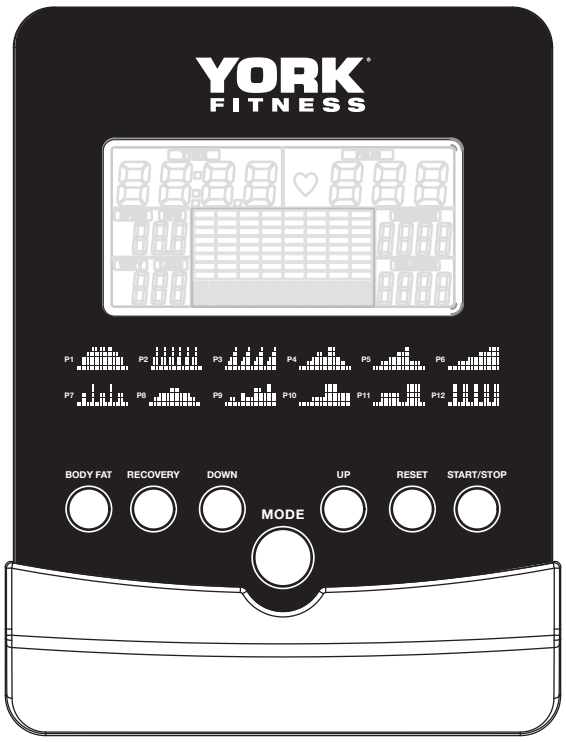


| ITEM | DESCRIPTION |
|---|---|
| **TIME** | • Workout time displayed during exercise.<br>• Range 0:00 ~ 99:59 |
| **SPEED** | • Workout speed displayed during exercise.<br>• Range 0.0 ~ 99.9 |
| **DISTANCE** | • Workout distance displayed during exercise.<br>• Range 0.0 ~ 99.9 |
| **CALORIES** | • Burned calories during workout display.<br>• Range 0 ~ 999 |
| **PULSE** | • Pulse bpm displayed during exercise.<br>• Pulse alarm when over preset target pulse. |
| **RPM** | • Rotation per minute<br>• Range 0 ~ 999 |
| **WATT** | • Workout power consumption<br>• In Watt Program mode, computer will remain preset watt value (setting range 0~350) |
| **MANUAL** | • Manual mode workout. |
| **PROGRAM** | • 12 PROGRAM selection. |
| **USER** | • User creates resistance level profile. |
| **H.R.C.** | • Target HR training mode. |

## Key Function:

| FUNCTION | DESCRIPTION |
|---|---|
| **Up** | • Increase resistance level<br>• Setting selection. |
| **Down** | • Decrease resistance level<br>• Setting selection. |
| **Mode** | • Confirm setting or selection. |
| **Reset** | • Hold on pressing for 2 seconds, computer will reboot and start from user setting.<br>• Reverse to main menu during presetting workout value or stop mode. |
| **Start/ Stop** | • Start or Stop workout. |
| **Recovery** | • Test heart rate recovery status. |
| **Body Fat** | • Test body fat% and BMI. |

## Power On

Plug in power supply, computer will power on and display all segments on LCD for 2 seconds. Enter into user data setting mode (Age, Sex, Height, Weight)

After 4 minutes without pedaling or pulse input, console will enter into power saving mode.

Press any key may wake the console up.

## Manual Mode

Press START in main menu may start workout in manual mode.

1. Press UP or DOWN to select workout program, choose Manual and press Mode to enter.
2. Press UP or DOWN to preset TIME, DISTANCE, CALORIES, PULSE and press MODE to confirm.
3. Press START/STOP keys to start workout. Press UP or DOWN to adjust load level.
4. Press START/STOP keys to pause workout. Press RESET to reverse to main menu.

## Program Mode

1. Press UP or DOWN to select workout program, choose the Program and press Mode to enter. (Total Program = 12)
2. Press UP or DOWN to preset TIME.
3. Press START/STOP key to start workout. Press UP or DOWN to adjust load level.
4. Press START/STOP key to pause workout. Press RESET to reverse to main menu.

# Operational instructions

## User Program Mode

1. Press UP or DOWN to select workout program, choose User and press Mode to enter.
2. Press UP or DOWN to set load level of each column, and press MODE to next one. (Total column = 20)
3. Hold on pressing MODE to finish or quit setting.
4. Press UP or DOWN to preset workout TIME.
5. Press START/STOP key to start workout. Press UP or DOWN to adjust load level.
6. Press START/STOP key to pause workout. Press RESET to reverse to main menu.

## H.R.C. mode

1. Press UP or DOWN to select workout program, choose H.R.C. and press Mode to enter.
2. Press UP or Down to select 55%.75%.90% or TAG (TARGET H.R.) (default: 100).
3. Press UP or DOWN to preset workout TIME.
4. Press START/STOP key to start or stop workout. Press RESET to reverse to main menu.

## WATT Mode

1. Press UP or DOWN to select workout program, choose WATT and press Mode to enter.
2. Press UP or DOWN to preset WATT target. (default: 120)
3. Press UP or DOWN to preset TIME.
4. Press START/STOP key to start workout. Press UP or DOWN to adjust Watt level.
5. Press START/STOP key to pause workout. Press RESET to reverse to main menu.

## Recovery

1. User must be holding the handgrip. When the pulse value is displayed on the computer, press on the RECOVERY key.
2. TIME shows “0:60” (seconds) and count down.

Computer will show F1 to F6 after count down to 0 to test heart rate recovery status.

| | |
|---|---|
| 1.0 | OUTSTANDING |
| 1.0 « F « 1.9 | EXCELLENT |
| 2.0 « F « 2.9 | GOOD |
| 3.0 « F « 3.9 | FAIR |
| 4.0 « F « 5.9 | BELOW AVERAGE |
| 6.0 | POOR |

## Body Fat Mode

1. When workout stop, press BODY FAT key.
2. Hold on handgrip, after 8 seconds, computer will show BMI, FAT% and fat symbol.
3. Press BODY FAT key again reverse to main menu.

**B.M.I. (Body mass index) integrated**

| B.M.I SCALE | LOW | LOW/MED | MEDIUM | MED/HIGH |
|---|---|---|---|---|
| RANGE | « 20 | 20 - 24 | 24.1 - 26.5 | » 26.5 |

**Body Fat**

| Sex \ Symbol | LOW ( - ) | LOW/MED ( + ) | MEDIUM ( ▲ ) | MED/HIGH ( ◆ ) |
|---|---|---|---|---|
| MALE | <13% | 13%-25.9% | 26%-30% | >30% |
| FEMALE | <23% | 23%-35.9% | 36%-40% | >40% |

## Troubleshooting:

| CODE | DESCRIPTION |
|---|---|
| **E-1** | Hands are not hold on tightly on grips during BODY FAT test. |
| **E-4** | Check the user's age, height, weight figure setting when the test result is out of the range of FAT% 5~50 and BMI 5~50% |
| **E-2** | Check if cables are well connected or damaged. |

# Troubleshooting

If you have a problem with your exercise equipment, before you do anything else please check that all the cables have been connected correctly. Loose cables are very common and many problems can be solved by making sure the cables are properly connected.

The following table details the most common problems and how to fix them. If you still have a problem after going through the troubleshooting guide please call your local YORK distributor for advice.

| PROBLEM | CAUSE | CORRECTION |
|---|---|---|
| NO DISPLAY | No power | Plug in power |
| NO SPEED DISPLAY | Wires are damaged or not connected properly | Verify all wires are connected properly |
| | Speed sensor is too far from magnet | Contact your local YORK distributor |
| PARTIAL DISPLAY | The PA board is not connected properly | Verify all wires are connected properly |
| | | Disconnect and re-connect all cables |
| | | Contact your local YORK distributor |
| NO PULSE SIGNAL | Wires are damaged or not connected properly | Verify all wires are connected properly |
| | Too much hand movement | Dry palms |
| | Palms too wet | Grip using moderate pressure |
| | Hand Pulse Sensor is being gripped too tightly | Remove all rings |
| | User is wearing rings | Contact your local YORK distributor |

FOR YOUR OWN SAFETY, DO NOT OPEN PROTECTIVE CASING. IF ERROR PERSIST, PLEASE CONTACT YOUR LOCAL YORK DISTRIBUTOR FOR ADVICE. KEEP THE EQUIPMENT OUT OF USE UNTIL IT IS REPAIRED.

If you are having problems with your heart rate reading, please note that some fibres used in clothes eg) polyester, create static electricity that may prevent a reliable heart rate reading. Mobile phones, TV's, microwaves and other electrical appliances that generate an electromagnetic field may also interfere with heart rate measurement.

# Notes

# Fitness guide

## Correct Cycling Form

- Sit on the cycle, with your feet on the pedals and inside the pedal straps.
- Ensure that the seat height is adjusted correctly - you should be stable and balanced whilst on the saddle. The basic rule for getting the seat height right is that as the pedal reaches its lowest point, the leg is almost straight.
- Try to ensure that your back is straight whilst exercising, especially for long periods.

## Correct Cross-training Form

To start using the cross trainer, simply stand on the foot pedals with the front of your shoes close to the front edge of the pedal cap. Place your hands at a comfortable position on the handlebars. Simply move your highest foot forward and follow the natural path of the machine.

Start on a load level that is comfortable to familiarize yourself with the machine. Once you are comfortable, start adjusting the load level to achieve the workout desired.

**Forward and Reverse:** The cross trainer can be used in the forward and reverse direction to vary the muscles that you workout. This will also vary your workout helping you to stay motivated. To change directions, simply slow the pedals down until they stop and switch directions.

**Load Level Adjustment:** The load level of cross trainer can be changed at any time during your workout. Adjusting your load level will allow you to increase or decrease your intensity level.

## Suggested Stretches

The correct form for several basic stretches is shown at the right. Move slowly as you stretch—never bounce.

**1. Hamstring Stretch**

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.

**2. Calf/Achilles Stretch**

With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

**3. Quadriceps Stretch**

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

**4. Inner Thigh Stretch**

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

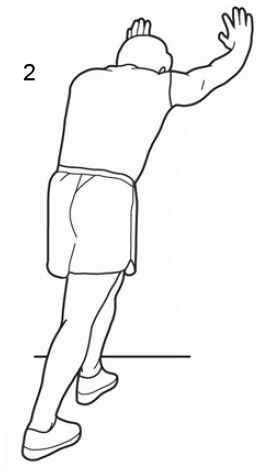

## How Long Should I Exercise For?

That really depends on your current level of fitness. If you're just starting out on a new exercise program, you should start gradually and build up - do not try to do too much too quickly. 30 minutes, 3 times a week should be enough.

Don't push yourself too hard - you should never feel exhausted during or following exercise.

## Heart Rate Training

To get the most out of your new piece of fitness equipment and see the best results from your training you should exercise at the right level of effort, and that means listening to your heart! Working out to a target heart rate means you can direct your workout to achieve different goals:

Good health - For those wishing to improve quality of life and general well being. Your sessions will need to be done at an intensity of between 50 - 60% of your estimated maximum heart rate, should last about 30 minutes and can be done on most days of the week.

Weight loss - To see a significant reduction in body fat, your sessions must be a little more intense - between 60 and 70% of your estimated maximum heart rate. These sessions can also be performed on most days of the week for up to 30 minutes.

Improving fitness levels - These sessions should be performed at 70 - 80% of your estimated maximum heart rate and can also involve bouts of interval training that would have your heart rate peaking for short times near your maximum heart rate level. These are intense sessions and will require at least a 48 hour rest between sessions.

## Calculating Your Target Heart Rate

First, you need to find your estimated maximum heart rate using the formula "220 minus your age in years". So, if you are 35 years old your estimated maximum heart rate is:

220 - 35 = 185 beats per minute (bpm)

Next, to calculate your target heart rate, simply multiply your estimated maximum heart rate (185bpm) by the applicable percentage. So, if your goal is better health:

185 x 60% = 111bpm

NOTE: The important issue to remember with all estimated calculations is that they are just estimates - if you don't feel comfortable exercising at your target then reduce it to a level you are comfortable with.

Heart rate training requires you to monitor your heart rate throughout the workout. For this we recommend using a chest strap (if your machine has a wireless receiver) or a heart rate monitor. For more information please get in touch using the Contact Us details.

Always consult your doctor before undertaking a new exercise regime. If you experience nausea, dizziness or other abnormal symptoms during exercise, stop at once and consult your doctor.

# Exploded drawing

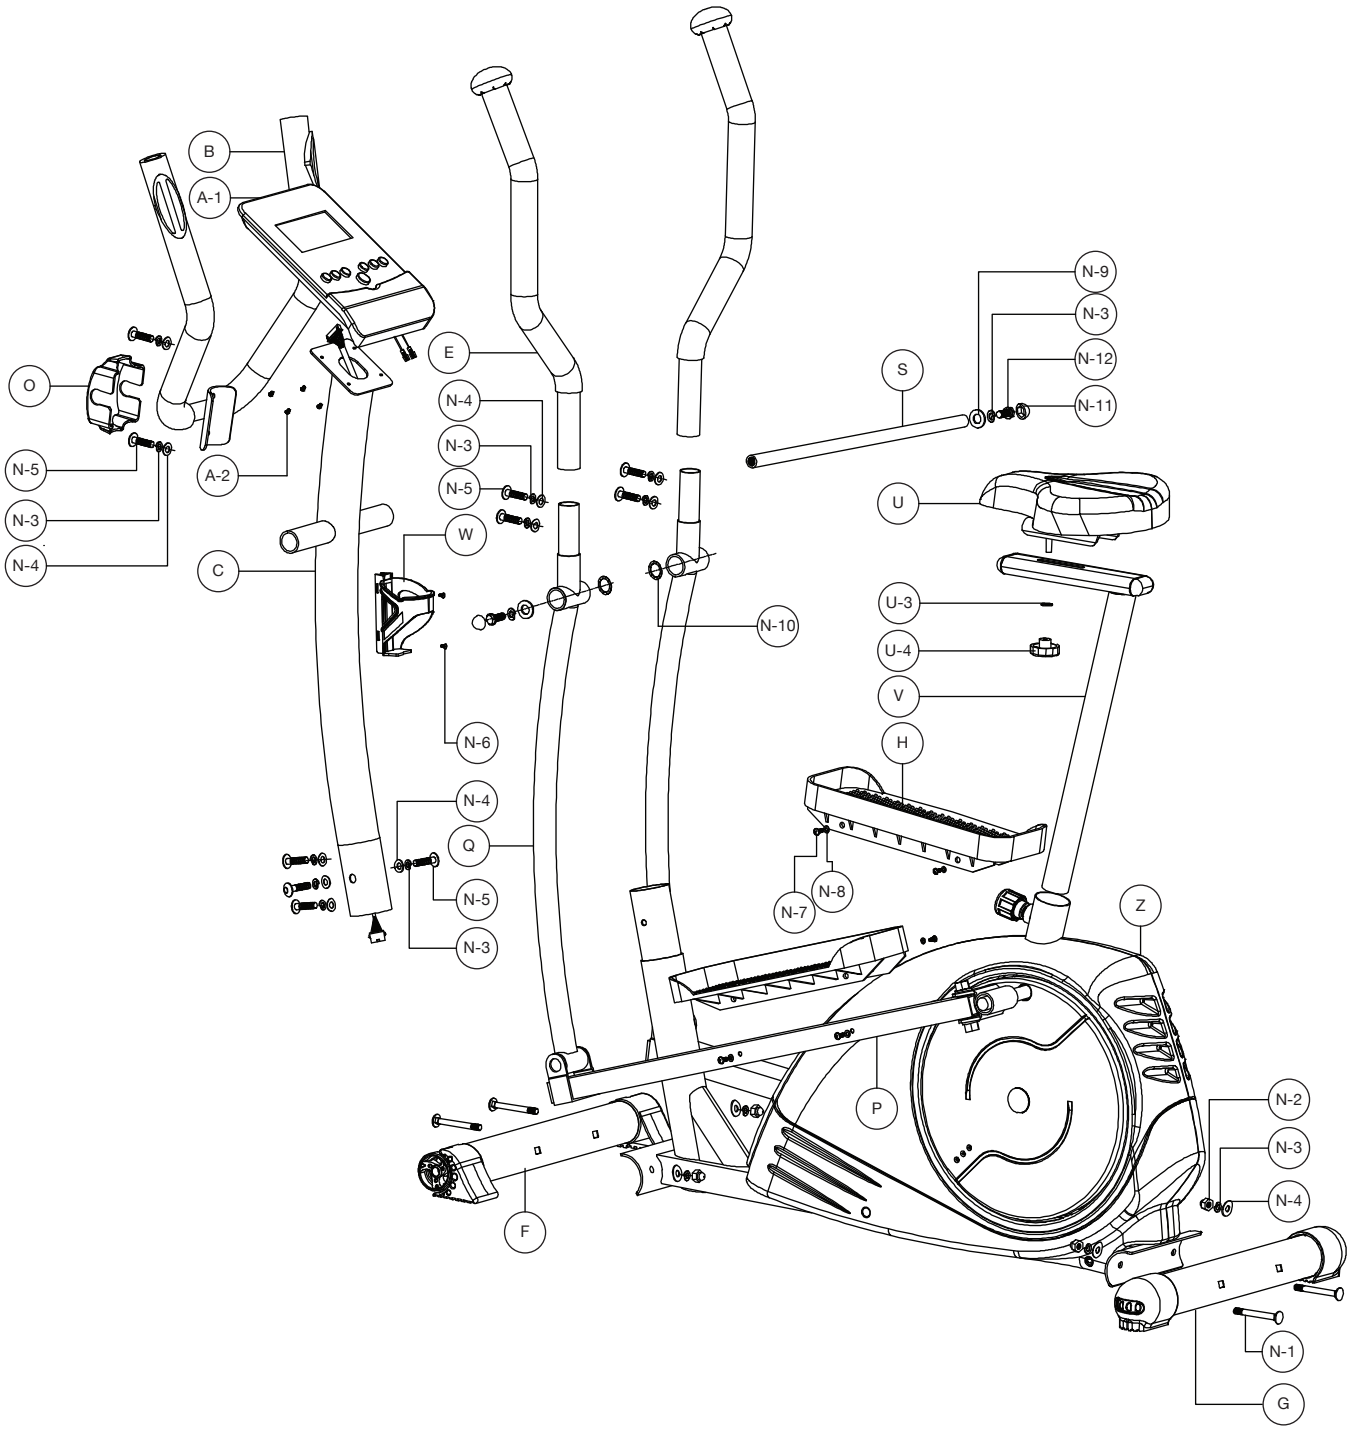

YORK FITNESS

E

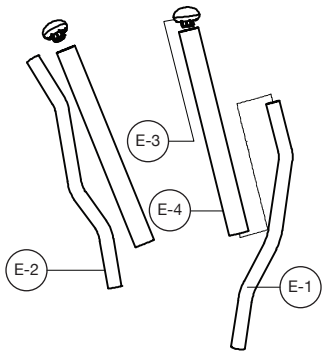


C

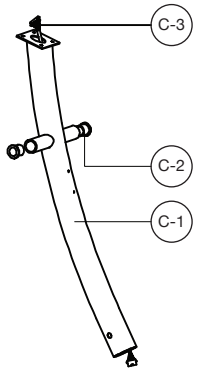


D

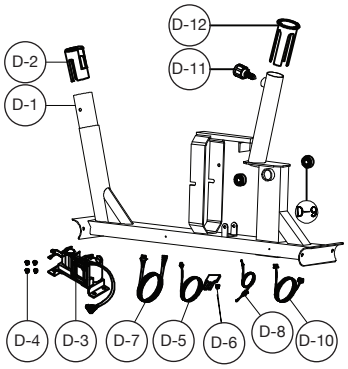


P

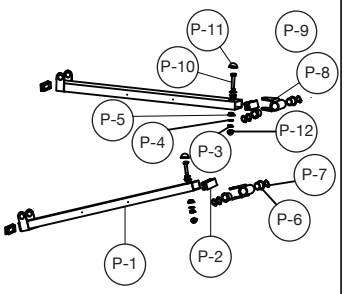


B

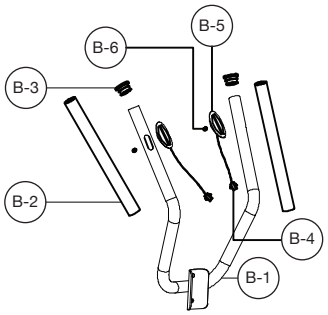


T

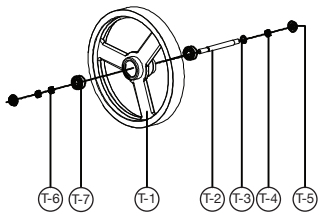


K

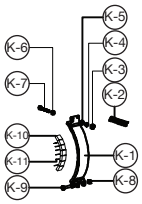


L

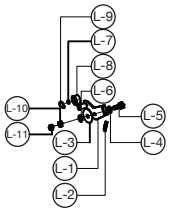


J

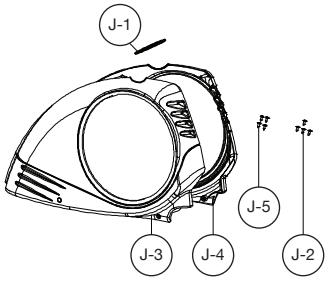


F

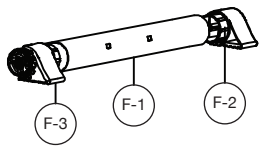


G

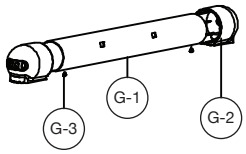


Q

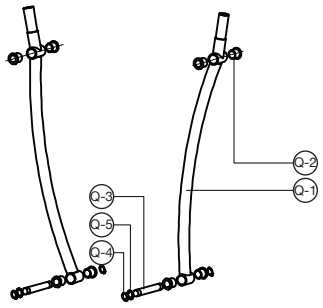


I

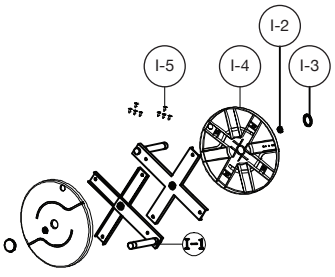


A

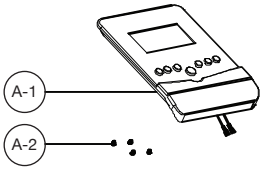


M

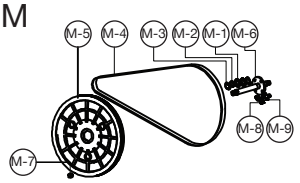


S



H

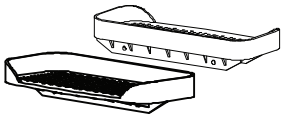

U

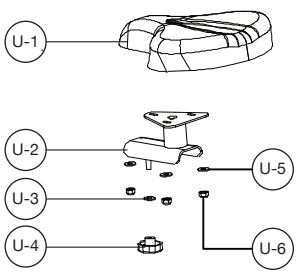


V

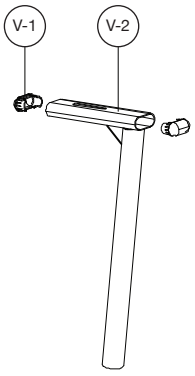


O

W

R

# Part list

| YORK REF. | REF. | DESCRIPTION | QTY. |
|---|---|---|---|
| 52060-001 | A | COMPUTER SET | 1 |
| 52060-002 | A-1 | COMPUTER (SM-2789-67) | 1 |
| 52060-003 | A-2 | BOLT (M5*0.8*10L) | 4 |
| 52060-004 | B | FIXING BAR SET | 1 |
| 52060-005 | B-1 | FIXING HANDLEBAR | 1 |
| 52060-006 | B-2 | FOAM (D23X7TX460L) | 2 |
| 52060-007 | B-3 | HAFF BALL END CAP | 2 |
| 52060-008 | B-4 | HAND PULSE CABLE (600L) | 2 |
| 52060-009 | B-5 | HAND PULSE SENSOR (PE18) | 2 |
| 52060-010 | B-6 | SCREW (ST4*15L) | 2 |
| 52060-011 | C | HANDLEBAR POST SET | 1 |
| 52060-012 | C-1 | HANDLEBAR POST | 1 |
| 52060-013 | C-2 | BUSHING - D19.15X(D25.6X32)XL(17+3) | 2 |
| 52060-014 | C-3 | UPPER COMPUTER CABLE (900L) | 1 |
| 52060-015 | D | MAIN FRAME SET | 1 |
| 52060-016 | D-1 | MAIN FRAME | 1 |
| 52060-017 | D-2 | INNER TUBE | 1 |
| 52060-018 | D-3 | MOTOR | 1 |
| 52060-019 | D-4 | SCREW (ST4.2*1.4*15L) | 4 |
| 52060-020 | D-5 | SENSOR CABLE (100L) | 1 |
| 52060-021 | D-6 | BOLT (M5X0.8X12L) | 1 |
| 52060-022 | D-7 | LOWER COMPUTER CABLE (1200L) | 1 |
| 52060-023 | D-8 | TENSION CABLE (D1.5*200 L) | 1 |
| 52060-024 | D-9 | BEARING (#6003ZZ) | 2 |
| 52060-025 | D-10 | ELECTRIC CABLE (150L) | 1 |
| 52060-026 | D-11 | KNOB | 1 |
| 52060-027 | D-12 | INNER TUBE | 1 |
| 52060-028 | E | MOVEABLE HANDLEBAR | 1 |
| 52060-029 | E-1 | RIGHT MOVEABLE BAR | 1 |
| 52060-030 | E-2 | LEFT MOVEABLE BAR | 1 |
| 52060-031 | E-3 | MUSHROOM CAP | 2 |
| 52060-032 | E-4 | FOAM (D30*7T*390L) | 2 |
| 52060-033 | F | FRONT STABILIZER SET | 1 |
| 52060-034 | F-1 | FRONT STABILIZER | 1 |
| 52060-035 | F-2 | RIGHT MOVEABLE CAP | 1 |
| 52060-036 | F-3 | LEFT MOVEABLE CAP | 1 |
| 52060-037 | G | REAR STABILIZER SET | 1 |
| 52060-038 | G-1 | REAR STABILIZER | 1 |
| 52060-039 | G-2 | ADJUSTABLE CAP | 2 |
| 52060-040 | G-3 | SCREW (ST4X1.41X10L) | 2 |
| 52060-041 | H | PEDAL | 2 |
| 52060-042 | I | CRANK SET | 1 |
| 52060-043 | I-1 | CRANK | 2 |
| 52060-044 | I-2 | ANTI-LOOSEN NUT (M10*1.25*7T) | 2 |
| 52060-045 | I-3 | SIDE COVER | 2 |
| 52060-046 | I-4 | ROUND COVER | 2 |
| 52060-047 | I-5 | SCREW (ST4X1.41X15L) | 8 |
| 52060-048 | J | CHAIN COVER SET | 1 |
| 52060-049 | J-1 | ROUND RING FOR CHAIN COVER | 1 |
| 52060-050 | J-2 | SCREW (ST4.2X1.4X20L) | 4 |
| 52060-051 | J-3 | LEFT CHAIN COVER | 1 |
| 52060-052 | J-4 | RIGHT CHAIN COVER | 1 |
| 52060-053 | J-5 | SCREW (ST4X1.41X20L) | 4 |
| 52060-054 | K | FIXING PLATE FOR MAGNET SET | 1 |
| 52060-055 | K-1 | FIXING PLATE FOR MAGNET | 1 |
| 52060-056 | K-2 | SPRING (D1.0*42L) | 1 |
| 52060-057 | K-3 | NYLON NUT (M6*1*6T) | 1 |
| 52060-058 | K-4 | FLAT WASHER (D13*D6.5*1.0T) | 1 |
| 52060-059 | K-5 | NYLON NUT (D6*D19*1.5T) | 1 |
| 52060-060 | K-6 | NUT (M6*1*6T) | 1 |
| 52060-061 | K-7 | HEX BOLT (M6*65L) | 1 |
| 52060-062 | K-8 | NYLON NUT (M8*1.25*8T) | 1 |
| 52060-063 | K-9 | BOLT (M8*52L) | 1 |
| 52060-064 | K-10 | MAGNET | 8 |
| 52060-065 | K-11 | PLATE FOR MAGNET | 7 |

| YORK REF. | REF. | DESCRIPTION | QTY. |
|---|---|---|---|
| 52060-066 | L | FIXING PLATE FOR IDLE WHEEL SET | 1 |
| 52060-067 | L-1 | FIXING PLATE FOR IDLE WHEEL | 1 |
| 52060-068 | L-2 | SPRING (D3*D17*59L) | 1 |
| 52060-069 | L-3 | FLAT WASHER (D50*D10*3.0T) | 1 |
| 52060-070 | L-4 | PLASTIC WASHER (D10*D24*0.4T) | 1 |
| 52060-071 | L-5 | HEX BOLT (M8*1.25*30L) | 1 |
| 52060-072 | L-6 | FLAT WASHER (D30*D8.2*3.0T) | 1 |
| 52060-073 | L-7 | FIXING RING (D13*D10*1.9T) | 1 |
| 52060-074 | L-8 | IDLE WHEEL | 1 |
| 52060-075 | L-9 | C-CLIP - S-10(1T) | 1 |
| 52060-076 | L-10 | NUT (M8*1.25*6T) | 1 |
| 52060-077 | L-11 | NYLON NUT (M8*1.25*8T) | 1 |
| 52060-078 | M | BELT WHEEL SET | 1 |
| 52060-079 | M-1 | WAVED WAHSER (D17*D22*0.3T) | 2 |
| 52060-080 | M-2 | FLAT WASHER (D23*D17.2*1.5T) | 1 |
| 52060-081 | M-3 | C-CLIP - S-17(1T) | 2 |
| 52060-082 | M-4 | BELT - 420(1067)L PJ5 | 1 |
| 52060-083 | M-5 | BELT WHEEL | 1 |
| 52060-084 | M-6 | CRANK AXLE | 1 |
| 52060-085 | M-7 | ROUND MAGNET | 1 |
| 52060-086 | M-8 | HEX BOLT (M6*1.0*15L) | 4 |
| 52060-087 | M-9 | NYLON NUT (M6X1.0X6T) | 4 |
| 52060-088 | N-1 | SQUARE NECK BOLT (M8X1.25X75L) | 4 |
| 52060-089 | N-2 | DOMED NUT (M8X1.25X15L) | 4 |
| 52060-090 | N-3 | SPRING WASHER (D15.4XD8.2X2T) | 16 |
| 52060-091 | N-4 | CURVED WASHER (D22XD8.5X1.5T) | 14 |
| 52060-092 | N-5 | ALLEN BOLT (M8X1.25X20L) | 10 |
| 52060-093 | N-6 | BOLT (M5*0.8*20L) | 2 |
| 52060-094 | N-7 | SCREW (M6X15L) | 8 |
| 52060-095 | N-8 | FLAT WASHER (D14XD6.5X0.8T) | 8 |
| 52060-096 | N-9 | FLAT WASHER (D25XD8.5X2T) | 2 |
| 52060-097 | N-10 | WAVED WAHSER (D26*D19.5*0.3T) | 2 |
| 52060-098 | N-11 | SCREW COVER - D29*21(M8) | 2 |
| 52060-099 | N-12 | HEX BOLT (M8X1.25X25) | 2 |
| 52060-100 | O | PROTECTIVE COVER | 1 |
| 52060-101 | P | PEDAL SET | 1 |
| 52060-102 | P-1 | PEDAL SET | 2 |
| 52060-103 | P-2 | END CAP | 4 |
| 52060-104 | P-3 | NYLON NUT (M10*1.5*10T) | 2 |
| 52060-105 | P-4 | FLAT WASHER (D20*D11*2.0T) | 2 |
| 52060-106 | P-5 | BUSHING - D19.15X(D25.6X32)XL(17+3) | 4 |
| 52060-107 | P-6 | BUSHING (D29*D11.9*9T) | 4 |
| 52060-108 | P-7 | C-CLIP (D21.5XD17.5X1.2T) | 4 |
| 52060-109 | P-8 | JONIT | 2 |
| 52060-110 | P-9 | FLAT WASHER (D24*D13.5*2.5T) | 2 |
| 52060-111 | P-10 | LADDER BOLT (M10*1.5*58L) | 2 |
| 52060-112 | P-11 | SCREW COVER - D30*17(M12) | 2 |
| 52060-113 | P-12 | SCREW COVER - D28*17(M10) | 2 |
| 52060-114 | Q | MOVEABLE SUPPORTING TUBE SET | 1 |
| 52060-115 | Q-1 | MOVEABLE SUPPORTING TUBE | 2 |
| 52060-116 | Q-2 | BUSHING - D19.15X(D25.6X32)XL(17+3) | 8 |
| 52060-117 | Q-3 | FRONT PEDAL AXLE | 2 |
| 52060-118 | Q-4 | C-CLIP (D21.5XD17.5X1.2T) | 4 |
| 52060-119 | Q-5 | WAVED WASHER (D26*D19.5*0.3T) | 2 |
| 52060-120 | R | ADAPTOR (OUTPUT 9VA) | 1 |
| 52060-121 | S | AXLE - D19X374.5(M8X1.25) | 1 |
| 52060-122 | T | FLYWHEEL SET | 1 |
| 52060-123 | T-1 | FLY WHEEL | 1 |
| 52060-124 | T-2 | FLYWHEEL AXLE - D10X120L(3/8"-26UNF) | 1 |
| 52060-125 | T-3 | FIXING RING (D13*D10*1.9T) | 1 |
| 52060-126 | T-4 | NUT - D9.5X3T(3/8"-26UNFX3T) | 1 |
| 52060-127 | T-5 | ANTI-LOOSEN NUT (3/8"-26UNF*6.5T) | 2 |
| 52060-128 | T-6 | NUT - D9.5X5T(3/8"-26UNFX5T) | 2 |
| 52060-129 | T-7 | BEARING (#6000ZZ) | 2 |
| 52060-130 | U | SEAT ADJUSTMENT TUBE SET | 1 |

| YORK REF. | REF. | DESCRIPTION | QTY. |
|---|---|---|---|
| 52060-131 | U-1 | SEAT | 1 |
| 52060-132 | U-2 | SEAT ADJUSTMENT TUBE | 1 |
| 52060-133 | U-3 | FLAT WASHER (D25XD8.5X2T) | 1 |
| 52060-134 | U-4 | CLUB KNOB | 1 |
| 52060-135 | U-5 | FLAT WASHER (D18*D8.5*1.2T) | 3 |
| 52060-136 | U-6 | NYLON NUT (M8*1.25*8T) | 3 |
| 52060-137 | V | SEAT POST SET | 1 |
| 52060-138 | V-1 | OVAL CAP (25*50*28L) | 2 |
| 52060-139 | V-2 | SEAT POST | 1 |
| 52060-140 | W | PROTECTIVE COVER | 1 |

YORK®
FITNESS

www.yorkfitness.com